


Quick Setup Guide

Printing to Pre-diecut Label Stock

1. Open PTPrint to view the label setup wizard.
2. Find the stock sticker attached to every roll of pre-diecut label stock.
3. Match the values on the stock sticker with the corresponding values in the setup wizard.
4. Click OK to view your label layout.
5. Click on the File Menu – Select Print.

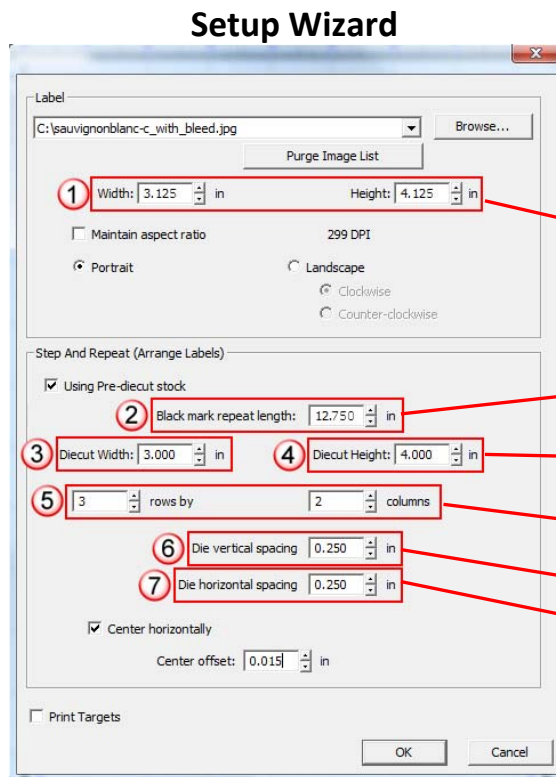

Example Stock Sticker

Do not use these Values

