


Label Guide Installation

Use the label guides discussed in this document for label widths less than 2" or for any label on which accurate registration is extremely important, such as full-bleed labels or circular labels.

- 1. Separate the four self adhesive squares along their perforated edges.
- 2. You will only need to use two of the four squares. Keep the other two handy for backup purposes.
- 3. Open the printer cover.
- 4. Remove the white backing from one of the squares. The green pattern side stays in place to provide a smooth surface for the label stock to pass by.
- 5. Place the first square guide on left side (your left as you are facing the unit) of the label feed area as shown in the photograph below.



6. Place the second square guide on the right side (your right as you are facing the unit) on the blue moveable throat guide as shown in the photograph below.

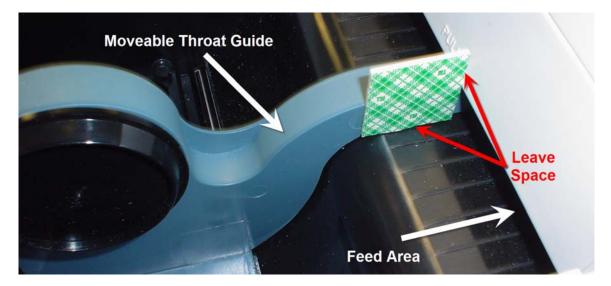

Be sure to leave some space below and to the front of the square so that the throat guide can still move from side to side to accommodate different sized stock.